


Item # 1000 805 850
Model # FRN-104580

USE AND CARE GUIDE

MARGIE WOVEN ACCENT TABLE

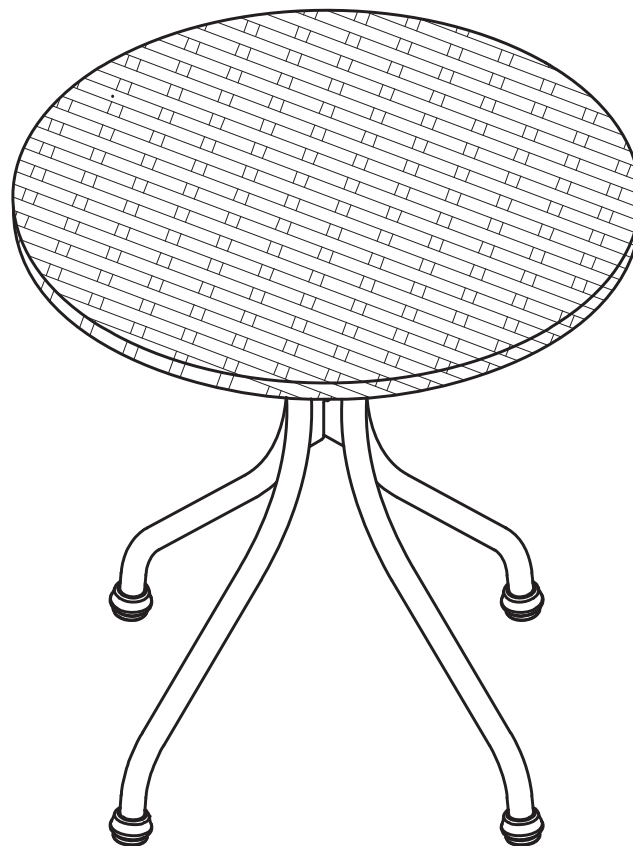

Questions, problems, missing parts?
Before returning to the store, call Customer Service

1-877-527-0313

HOMEDEPOT.CA


Table of Contents

Table of Contents	2	Pre-Assembly	3
Safety Information	2	Planning Assembly.....	3
Warranty	2	Hardware Included.....	3
One Year Limited Frame Warranty	2	Package Contents	4
What is covered	2	Assembly.....	5
What is not covered	2	Care & Cleaning	6
		Service Parts.....	7

Safety Information

 **WARNING:** Do not stand or sit on the tabletop.

 **WARNING:** Do not place heavy items on the tabletop.

 **WARNING:** Do not place extremely hot or cold items on the tabletop.

Warranty

ONE YEAR LIMITED FRAME WARRANTY

WHAT IS COVERED

One year frame and weave limited warranty .

WHAT IS NOT COVERED

This warranty does not cover damage due to neglect, abuse, weather related damage or commercial use.

Call the customer service team at 1-877-527-0313 or visit HOMEDEPOT.CA.



Pre-Assembly

PLANNING ASSEMBLY

Assemble product on a soft surface to prevent damage during assembly. Before assembling make sure all parts are present. Compare parts with the hardware included and package contents lists and diagrams in this document. If any part is missing or damaged, do not attempt to assemble the product or return to the place of purchase. Contact our customer team at 1-877-527-0313.

HARDWARE INCLUDED




 **NOTE:** Hardware shown to actual size.

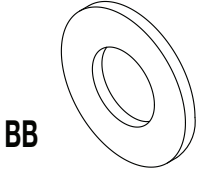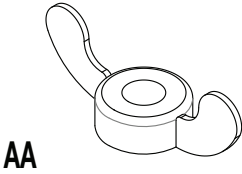

Part	Description	Quantity
AA	Wing nut	4
BB	Washer	4

Pre-Assembly (continued)

PACKAGE CONTENTS

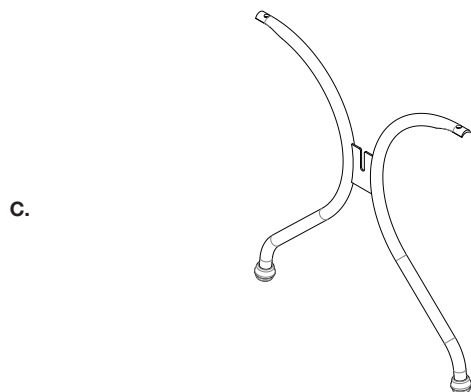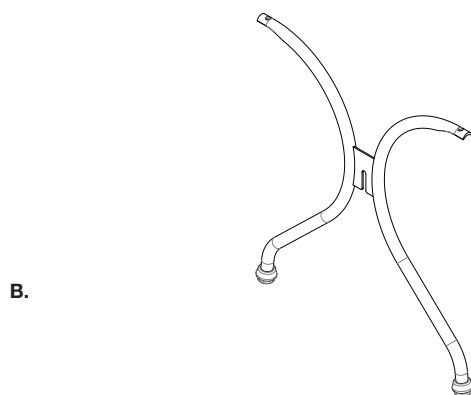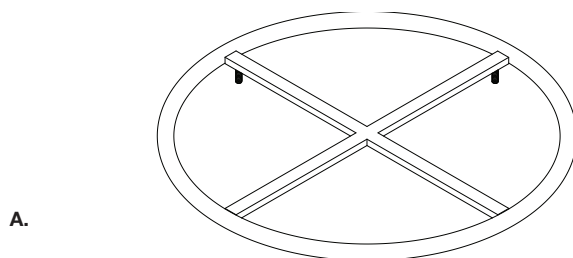


Part	Description	Quantity
A	Table top	1
B	Upper Leg	1
C	Lower Leg	1

Assembly


1 Attaching the Upper Leg

- Place the table top (A) on a soft, clean, and level surface. Attach the upper Leg (B) to the table top using wing nuts (AA) and washers (BB).
- Do not over tighten bolts.

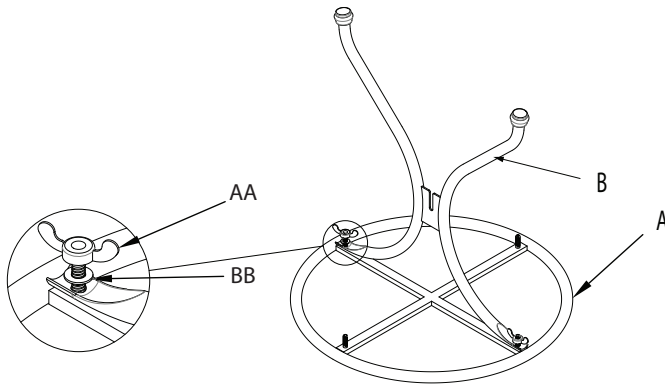


2 Attaching the Lower Leg

- Cross insert the lower leg (C) to the upper leg (B) and then attach the lower leg (C) to the table top (A) using wing nuts (AA) and washers (BB).
- Fully tighten all the bolts.

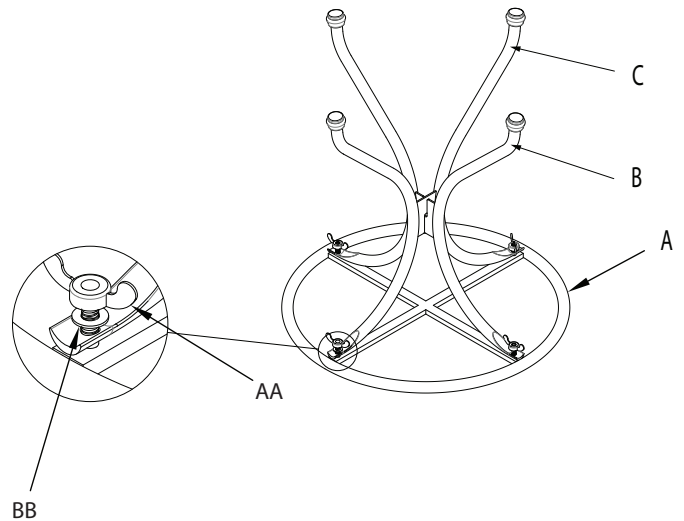

Assembly (continued)

3 Turn the table upright

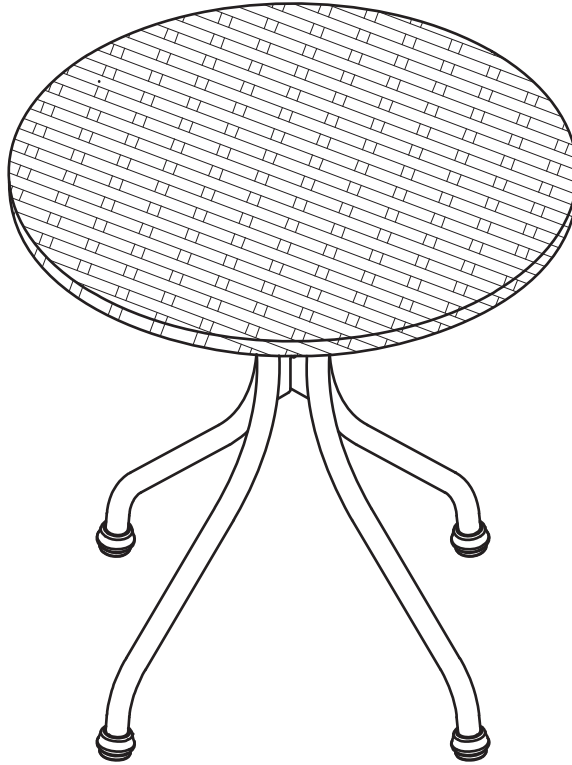


Care and Cleaning


- Use a mild soap and water for normal cleaning. Do not use janitorial or alcohol-based cleaners. Some cleaners may be marked as natural, but ingredients may cause discoloration or have an adverse reaction to your finish.
- Rinse with clean water and dry with a soft, absorbent cloth towel.

Service Parts


MODEL TYPE

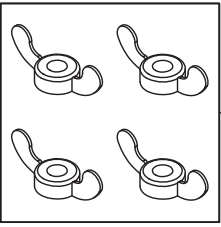

AA

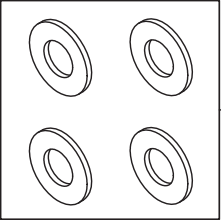

BB

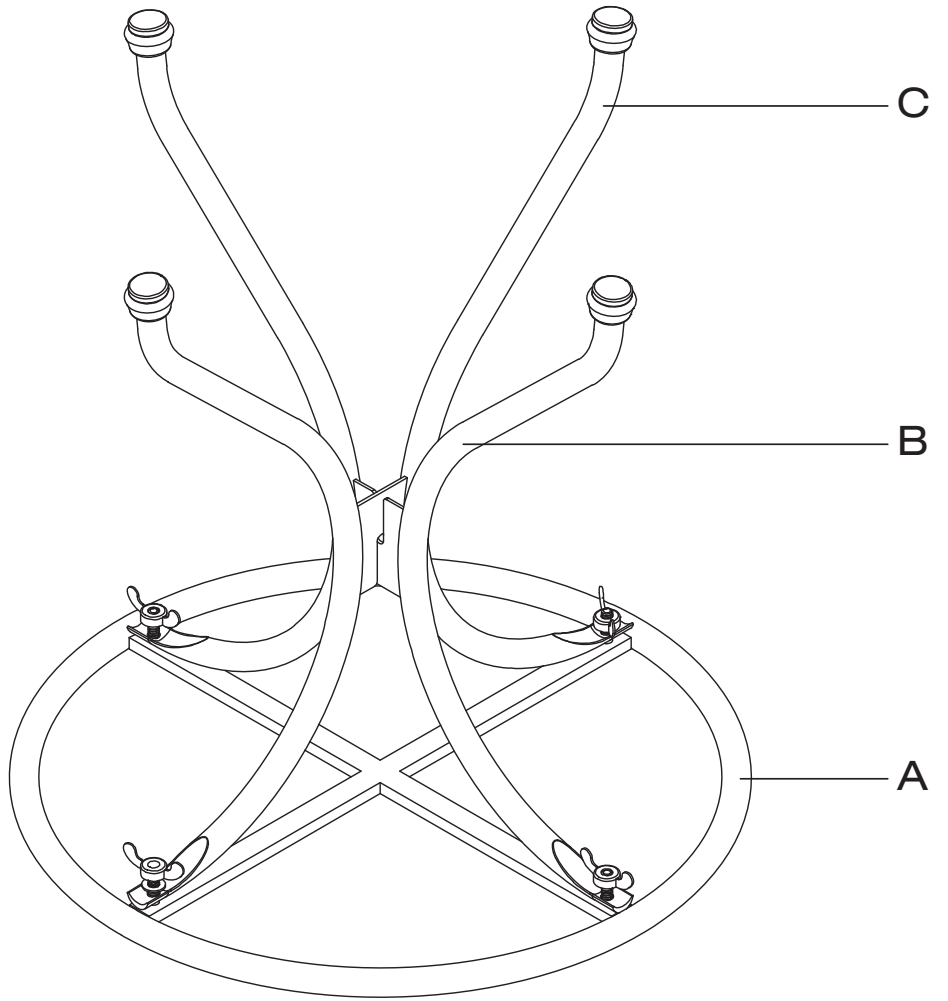

Part	Description	Quantity	Description	Part	Description	Quantity	Description
A	Tabletop	1	FRN-104580-A-TT-W-DKBWN	AA	Wing nut	4	FRN-104580-AA-WN-BLK
B	Upper Leg	1	FRN-104580-B-LG-W-DKBWN	BB	Washer	4	FRN-104580-BB-WHR-BLK
C	Lower Leg	1	FRN-104580-C-LG-W-DKBWN				

**Questions, problems, missing parts?
Before returning to the store, call Customer Service**

1-877-527-0313

HOMEDEPOT.CA

Retain this manual for future use.